

LEXMARKTM

Setup Guide



OptraTM T

First Edition (June 1999)

The following paragraph does not apply to any country where such provisions are inconsistent with local law: LEXMARK INTERNATIONAL, INC., PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

A form for the reader's comments is provided at the back of this publication. If the form has been removed, comments may be addressed to Lexmark International, Inc., Department F95/035-3, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A. In the United Kingdom and Eire, send to Lexmark International Ltd., Marketing and Services Department, Westhorpe House, Westhorpe, Marlow Bucks SL7 3RQ. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In the United Kingdom and Eire, call 0628-481500. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead.

Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark, MarkNet, MarkVision, and Optra are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.

© Copyright 1999 Lexmark International, Inc. All rights reserved.

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Lexmark International, Inc., Lexington, KY 40550.

FCC Emissions Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any questions on this statement should be directed to:


Director of Lab Operations
Lexmark International, Inc.
740 West New Circle Road NW
Lexington, KY 40550
(606) 232-3000.

Please see the online User's Guide for further information.

Safety Information

- If your product is NOT marked with this symbol , it MUST be connected to an electrical outlet that is properly grounded.
- The power cord must be connected to an electrical outlet that is near the product and easily accessible.
- Refer service or repairs, other than those described in the operating instructions, to a professional service person.
- This product is designed, tested and approved to meet strict global safety standards with the use of specific Lexmark components. The safety features of some parts may not always be obvious. Lexmark is not responsible for the use of other replacement parts.
- Your product uses a laser, exercise
CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Your product uses a printing process that heats the print media, and the heat may cause the media to release emissions. You must understand the section in your operating instructions that discusses the guidelines for selecting print media to avoid the possibility of harmful emissions.

Getting Started

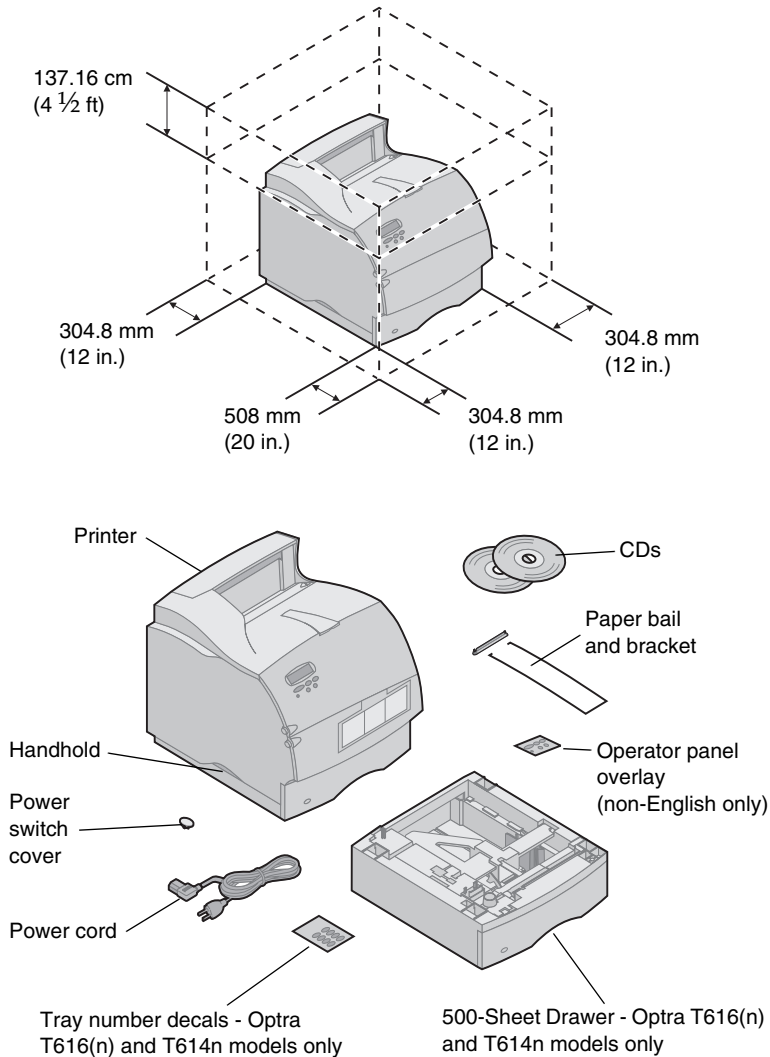

- 1 Select a well-ventilated place to set up your printer. Make sure you have a sturdy, low table or the optional printer stand on which to set the printer.

- 2 Remove all items from the box except the printer. If any items are missing, contact the place where you bought the printer.

Save the carton and packing material in case you need to repack the printer for service or storage.

Note: Leave the printer in the box until you are ready to install it. Then ask someone to help you lift the printer using the handholds.

Turn Off the Printer

If your printer is already set up, make sure the printer power is off and the power cord and any cables are unplugged *before* installing any options.

Options Compatibility

Options compatible with Optra™ T printers are labeled with a colored triangle. The location of the label is shown before each option install section.


Troubleshooting

If you encounter a problem while setting up the printer, refer to the *User's Guide*, available on the *Optra T Publications CD*, for more information.

Setup


Install Paper Options and Printer

1

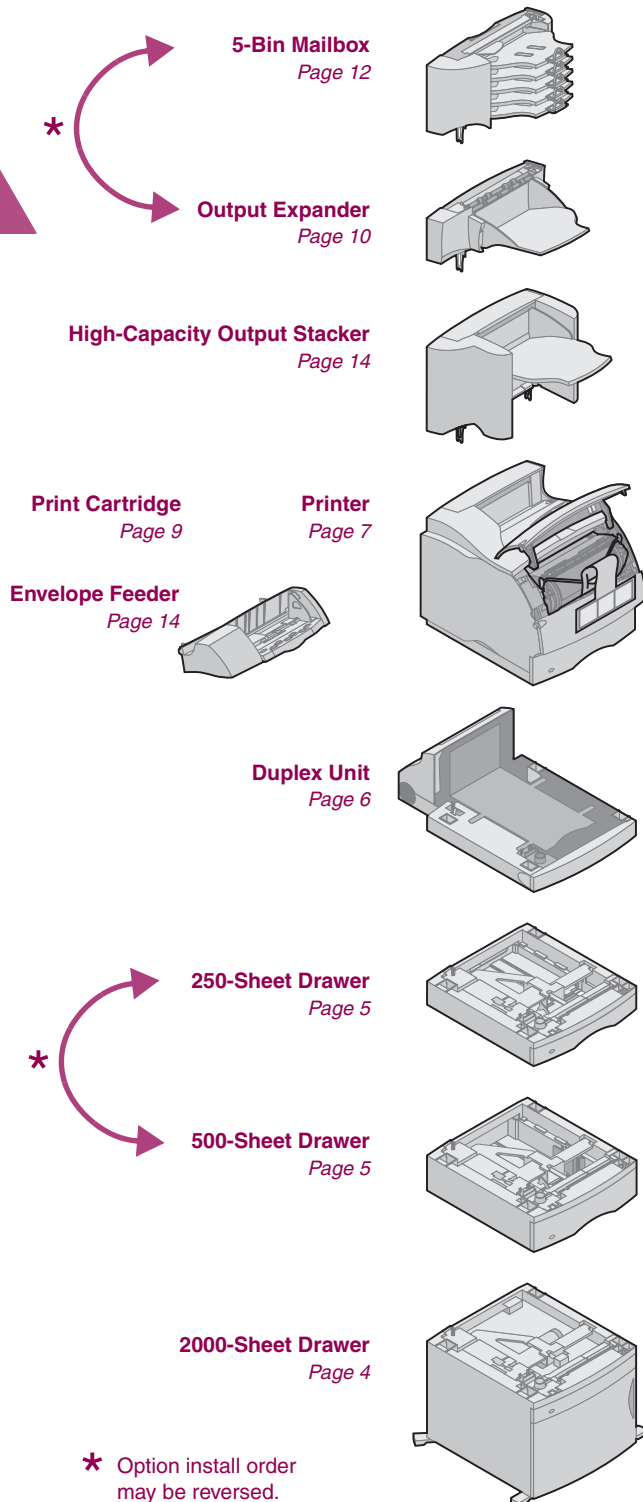

Install Memory and Option Cards


2

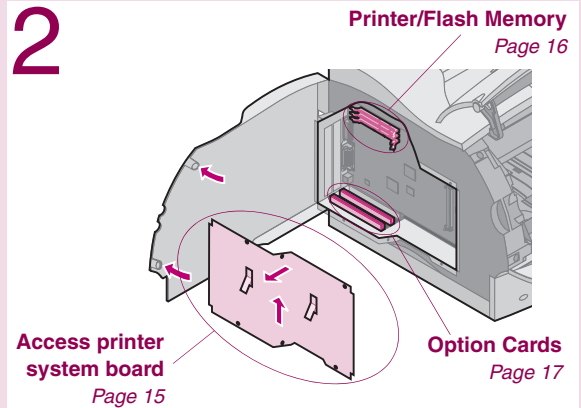

Load Paper


3

See Page 19

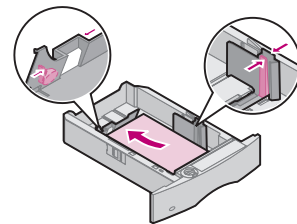

Attach Cables

 4



Parallel Cable - *Page 20*
Serial Cable - *Page 20*
Power Cord - *Page 21*

Verify Setup

5


See Page 22



Configure Network Printer

6

See Page 23












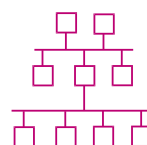


TCP/IP - *Page 24*
Novell NetWare - *Page 28*
AppleTalk - *Page 29*
OS/2 Warp Server - *Page 29*


Step 1: Install Paper Options and Printer

Paper Options Supported

The table illustrates various combinations of paper options supported by your printer. All models support a duplex unit and envelope feeder.

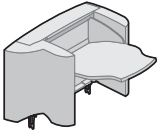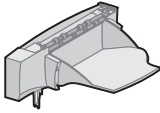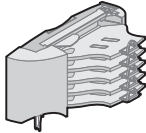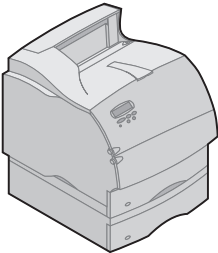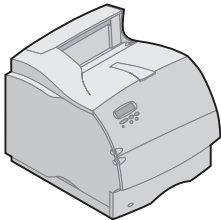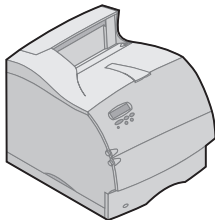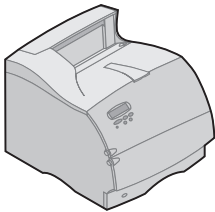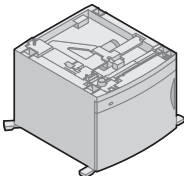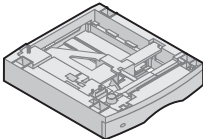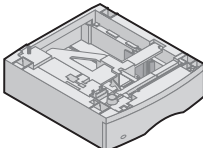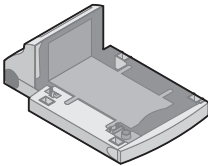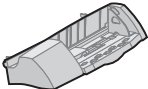	<div>    </div> <div> <div>High-Capacity Output Stacker</div> <div>Output Expander</div> <div>5-Bin Mailbox</div> </div>			
OUTPUT	Attach up to: 3 output expanders, 2 5-bin mailboxes, 1 of each, or 1 high-capacity output stacker, or 1 output expander and 1 high-capacity output stacker.	Attach up to: 3 output expanders, 2 5-bin mailboxes, 1 of each, or 1 high-capacity output stacker, or 1 output expander and 1 high-capacity output stacker.	Attach up to: 2 output expanders, 1 5-bin mailbox, or 1 high-capacity output stacker.	Does not support output options
PRINTER	 <div>Optra T616, T616n</div>	 <div>Optra T614, T614n</div>	 <div>Optra T612, T612n</div>	 <div>Optra T610, T610n</div>
INPUT	Attach up to: 3 additional optional drawers	Attach up to: 4 optional drawers (Optra T614) 3 additional optional drawers (Optra T614n ships with an extra 500-sheet drawer)	Attach up to: 3 optional drawers	Attach up to: 3 optional drawers
	<div>      </div> <div> <div>2000-Sheet Drawer</div> <div>250-Sheet Drawer</div> <div>500-Sheet Drawer</div> <div>Duplex Unit</div> <div>Envelope Feeder</div> </div>			

Installing the 2000-Sheet Drawer



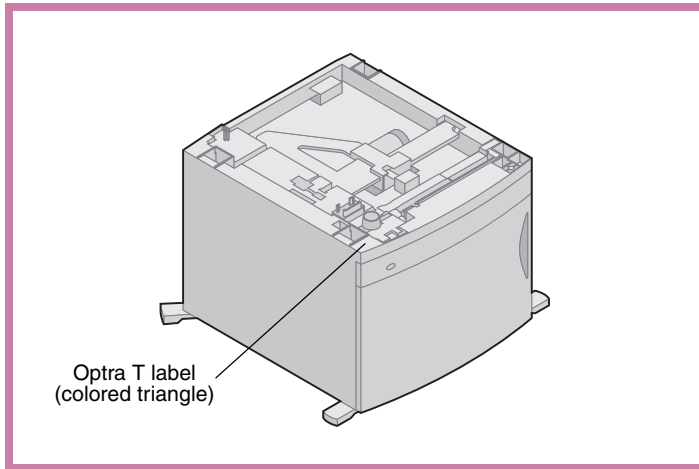


Your printer supports one 2000-sheet drawer. It gives your printer added capacity by letting you load up to four reams (approximately 2,000 sheets) of 20 lb paper.

The 2000-sheet drawer is packaged with a *User's Guide* that contains detailed instructions for installation, setup and use, including loading paper and removing paper jams.

When you have finished installing the 2000-sheet drawer, install any drawers or a duplex unit that you have purchased.

Installing a 250-Sheet or 500-Sheet Drawer

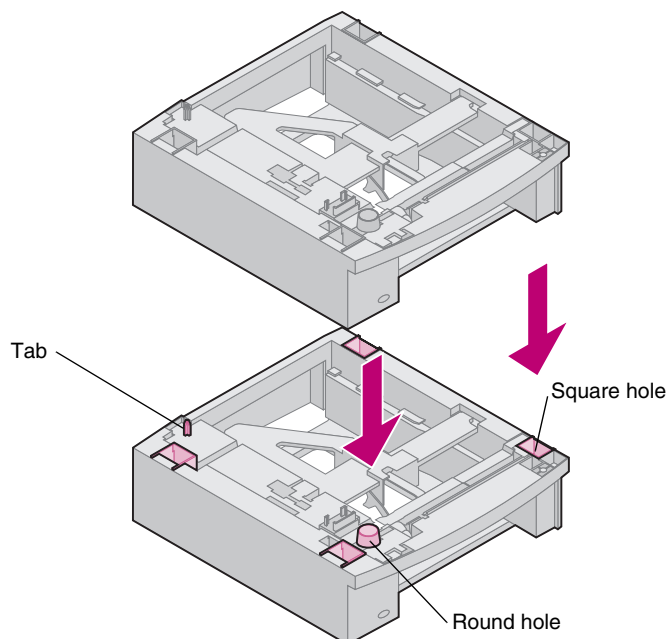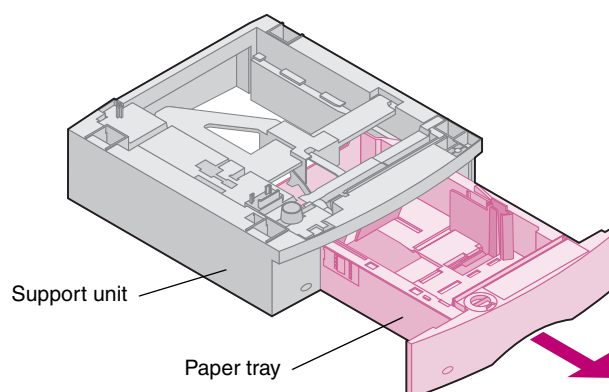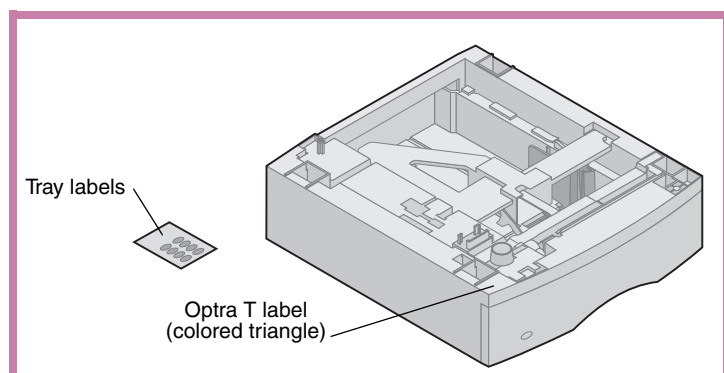

Paper drawers attach under the printer and optional duplex unit. The printer automatically recognizes any drawer that has been installed.

A drawer consists of a paper tray and a support unit. The 250-sheet drawer and the 500-sheet drawer are installed the same way.

- 1 Remove the tray from the support unit. Remove all packing material and tape from both the support unit and the tray.

- 2 Place the support unit on top of any previously installed paper drawers, or the table or printer cabinet where you plan to use the printer.

The tab, round hole and square holes on top of any drawer will help you seat the support unit so the edges are aligned properly. Make sure the support unit is securely in place.


At this point, attach another optional drawer, a duplex unit or the printer.

To attach a drawer, repeat steps 1 and 2.

To attach a duplex unit, see “Installing a Duplex Unit” on page 6.

To attach the printer, see “Placing the Printer” on page 7.

Installing a Duplex Unit

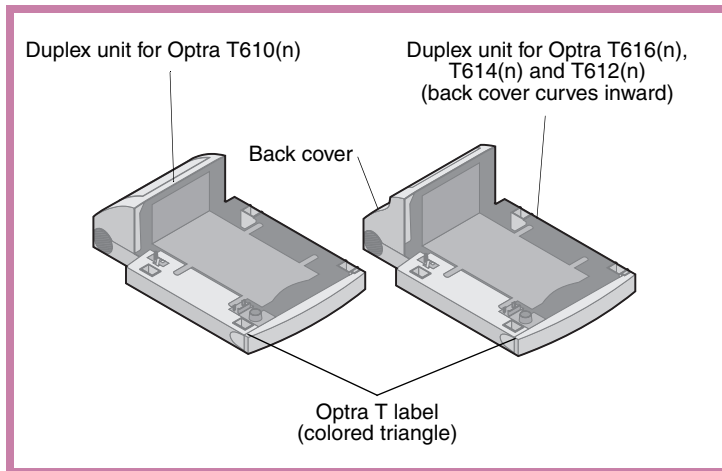


The duplex unit attaches under the printer, below the standard input tray and above any paper drawers.

Refer to the printer *User's Guide*, available on the *Optra T Publications CD*, for information on using the duplex unit.

- 1 Place the duplex unit on top of any installed paper drawers, or the table or printer cabinet where you plan to use the printer.

The tab, round hole and square holes on top of any drawer will help you seat the duplex unit so the edges are aligned properly. Make sure it is securely in place.

To attach the printer, see "Placing the Printer" on page 7.

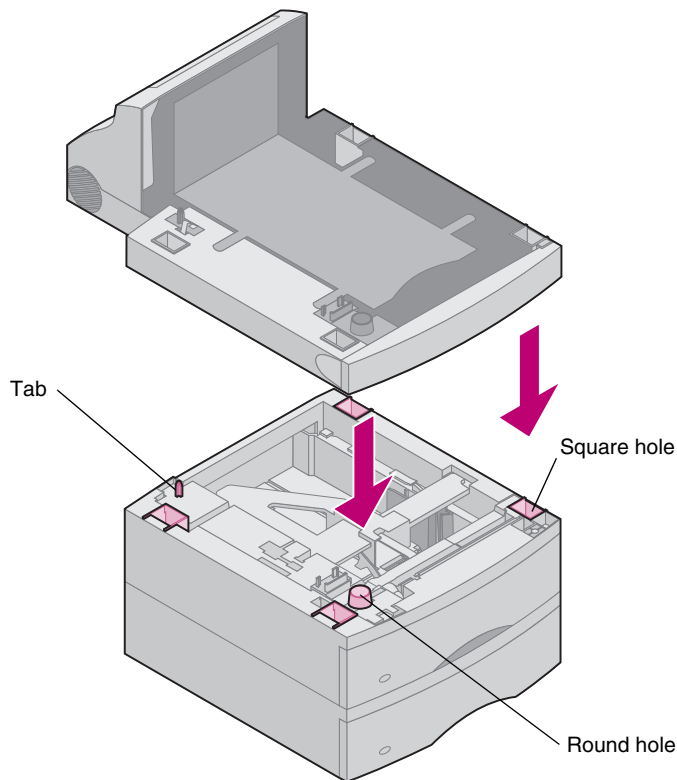


Placing the Printer

Note: In order to ensure adequate clearance when installing system board options, see “Install Memory and Optional Cards” on page 15 before you place the printer if you plan to:

- install memory or option cards
- and**
- will have less than 605.6 mm (24 in.) clearance on the left side of the printer.

Caution! Make sure your fingers are not under the printer when you set it down. Use the handholds on the printer or ask someone to help you lift it.

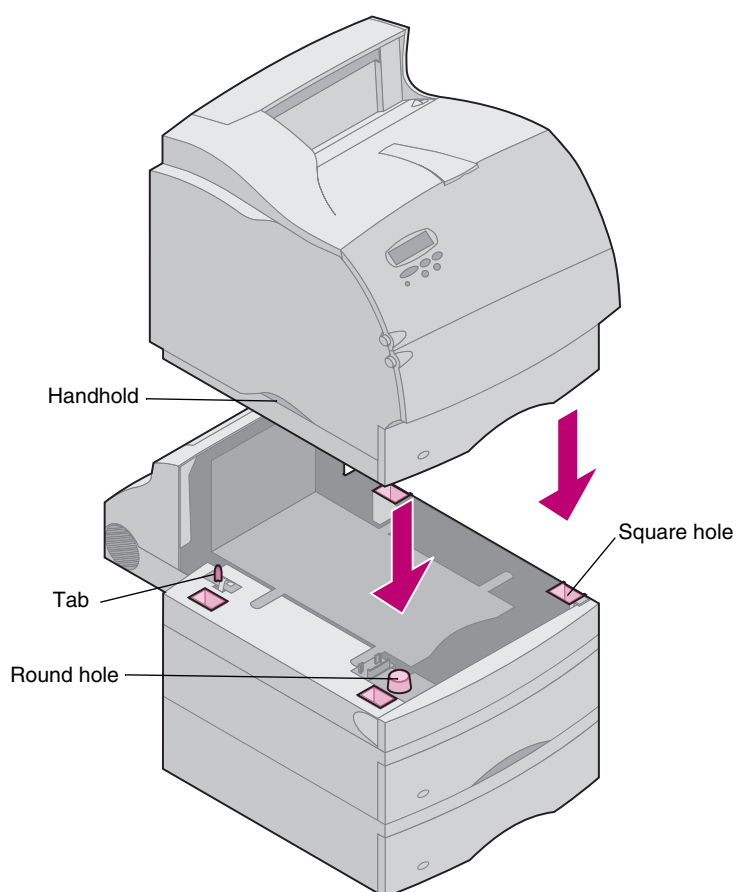

- 1 Ask someone to help you lift the printer by the handholds and lower it onto the duplex unit, optional drawer, table or printer cabinet.


The tab, round hole and square holes on top of any drawer or unit will help you seat the printer so the edges are aligned properly. Make sure the printer is securely in place.

To attach output options

If your printer supports output options, see:

- “Installing an Output Expander” on page 10
- “Installing a 5-Bin Mailbox” on page 12
- “Installing a High-Capacity Output Stacker” on page 14.


Attaching the Paper Bail

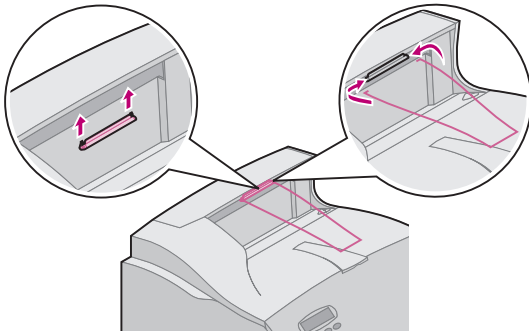

Note: Attach the paper bail to the top cover only if you do not plan to install a 5-bin mailbox as the *top* output option.

- 1** Remove the top cover of the printer and slide the plastic bracket onto the static brush holder. Adjust the bracket so it is centered over the exiting paper.
- 2** Place the tips of the wire paper bail into the ends of the plastic bracket so that the bail curves downward.
- 3** Replace the top cover.

Attaching Decals to Paper Trays

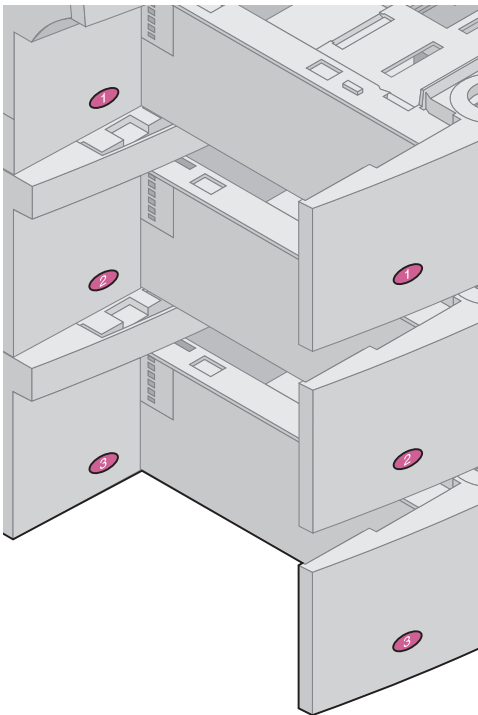


Decals showing the number "1" are on your printer and the standard input tray as shown. These decals keep the standard input tray paired with the printer.


If you purchased an Optra T616(n) or T614n printer, or optional drawers, you received a sheet of decals.

Peel the decals from the sheet and attach them to the recessed areas on the drawer and the matching tray as shown.


Removing the Print Cartridge and Packaging

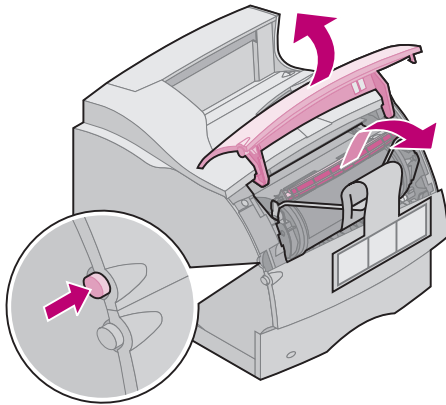

- 1 Push the release latch and open the upper front door of the printer.
- 2 Grasp the print cartridge by the handgrip and pull the print cartridge up and out.

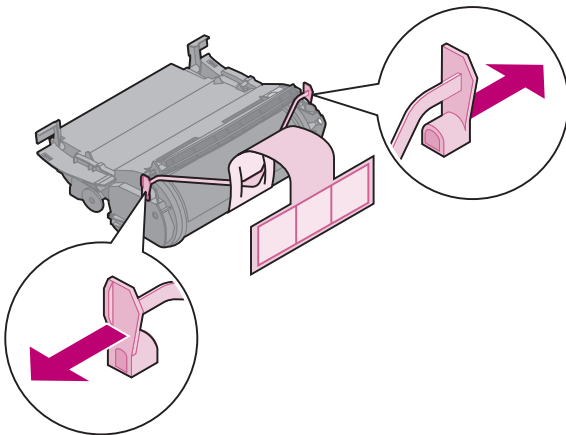


- 3 Pull on each end of the plastic, V-shaped piece and then pull the packaging material straight out. Discard all packaging material.

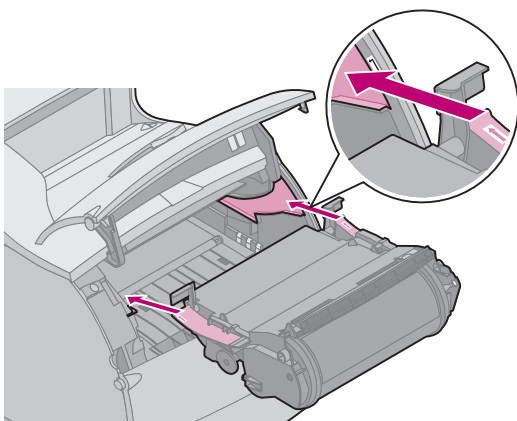

- 4 Reinstall the print cartridge. Align the slides on the print cartridge with the slots on the print cartridge cradle. Use the colored arrows inside the printer for placement.
- 5 Guide the print cartridge down as it drops and snaps into place.
- 6 Close the upper front door.


Installing an Output Expander

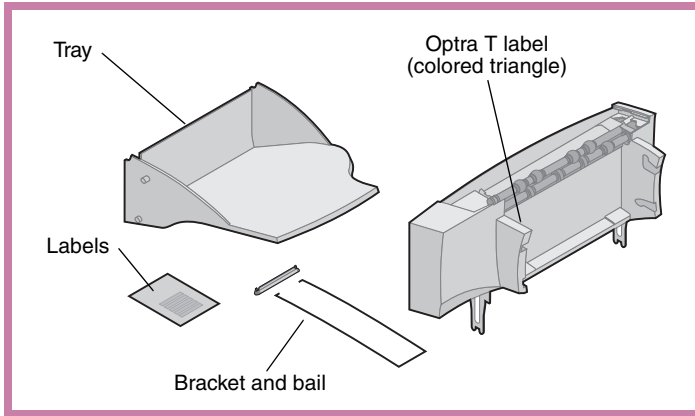


Each output expander consists of the expander and a removable tray. A paper bail, bracket, and labels are also included.

After you carefully unpack the output expander, install it immediately; otherwise, the edges of the mounting brackets could damage tabletops or fabrics.


Warning! The output expander tray is designed to hold the weight of print material only. Do not use it as a shelf; excess weight may cause it to disengage from the output expander.

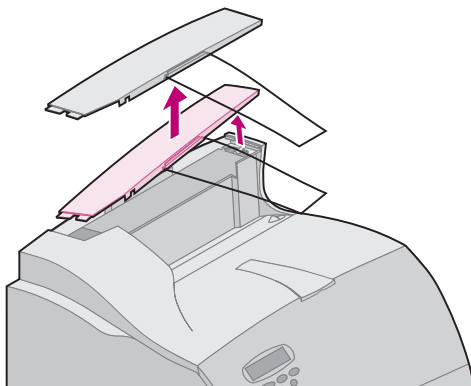


1 Remove the top cover from the printer or previously installed output option.

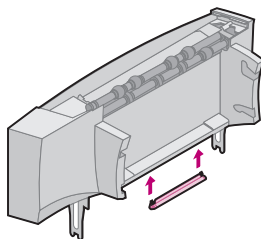

2 Slide the plastic bracket onto the static brush holder, located near the bottom of the output expander.

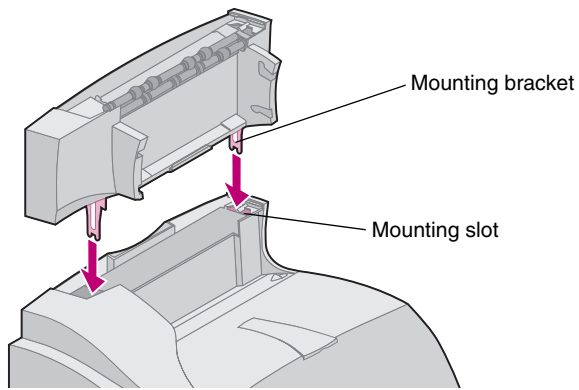


- 3 Insert the mounting brackets into the slots on top of the printer or output option. Make sure the output expander is seated securely.

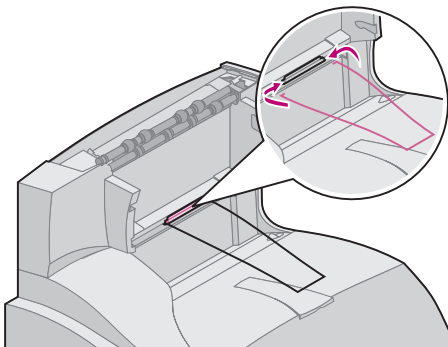

Note: Do not attach the paper bail **unless** you are mounting the output expander on the printer or another output expander.


- 4 Place the tips of the wire paper bail into the ends of the plastic bracket so that the bail curves downward.

The bail rests in the output tray of the expander below it, or in the printer output bin.

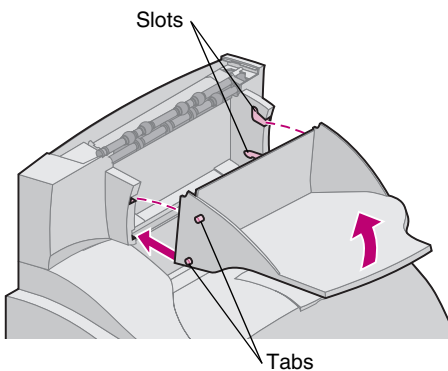

- 5 Slide the lower tabs on the tray into the lower slots on the output expander.
- 6 Rotate the tray up until the upper tabs click into the upper slots.
- 7 Attach the top cover to the output expander.


Installing a 5-Bin Mailbox

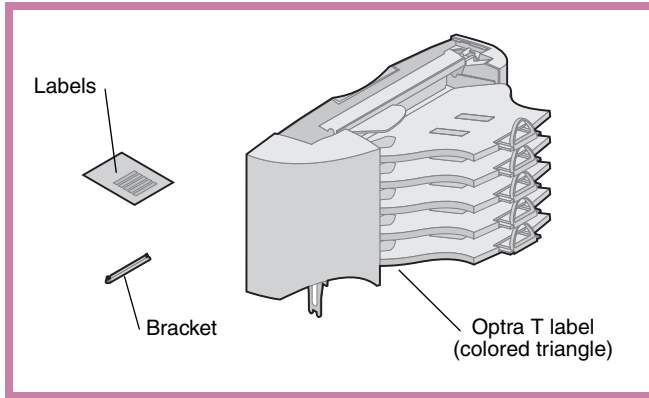


The 5-bin mailbox is shipped with a sheet of labels and a plastic bracket for attaching a paper bail.

After you carefully unpack the 5-bin mailbox, install it immediately; otherwise, the edges of the mounting brackets could damage tabletops or fabrics.



Warning! The 5-bin mailbox is designed to hold the weight of print material only. Do not use it as a shelf; excess weight may damage it.

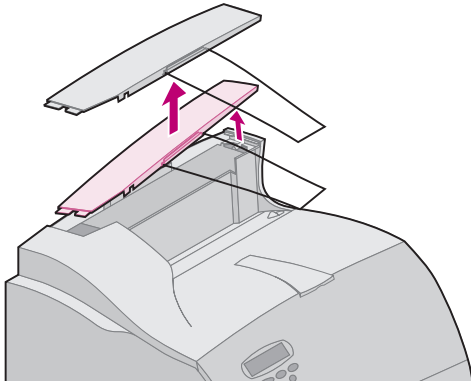


- 1 Remove the top cover from the printer or previously installed output expander or 5-bin mailbox.

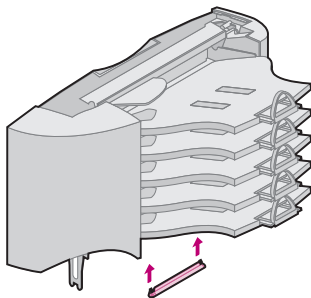

- 2 Slide the plastic bracket onto the static brush holder, located near the bottom of the 5-bin mailbox.

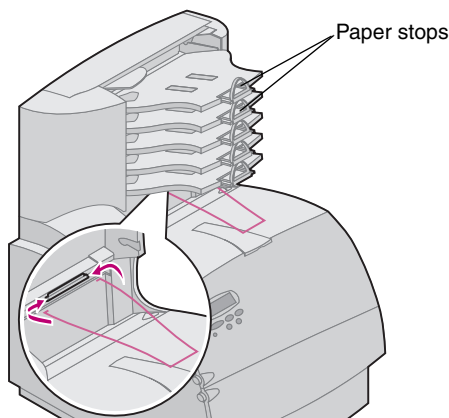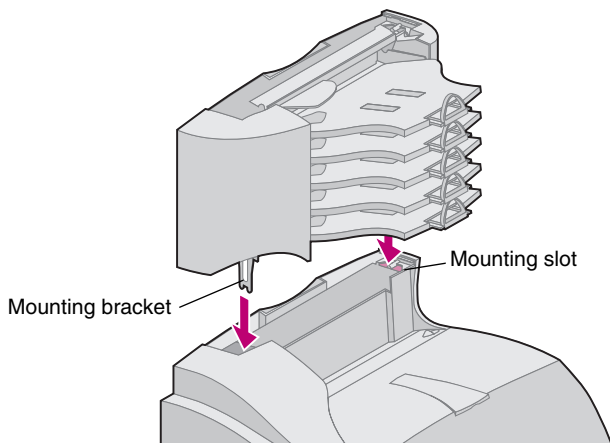

Attaching Labels to Output Expanders and 5-Bin Mailboxes

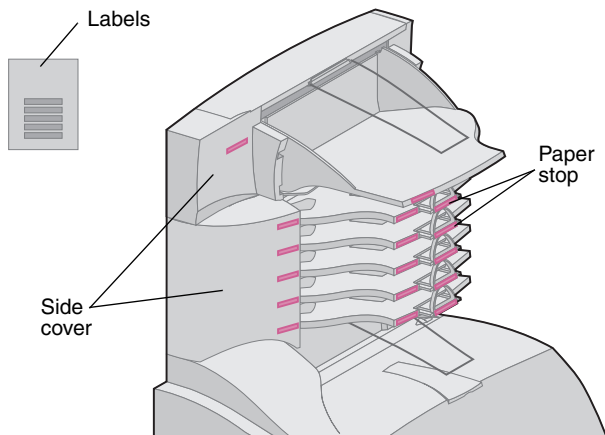

- 3 Insert the mounting brackets into the slots on top of the printer, output expander or 5-bin mailbox. Make sure the 5-bin mailbox is seated securely.

Note: If the 5-bin mailbox will be the topmost output option, remove the paper bail from the bracket on the top cover and store in a safe place.

- 4 Attach the top cover to the 5-bin mailbox.

Note: Do not attach the paper bail **unless** you are mounting the 5-bin mailbox on the printer or an output expander.

- 5 Place the tips of the wire paper bail into the ends of the plastic bracket so that the bail curves downward.


The bail rests in the output tray of the expander below it, or in the printer output bin.

- 6 Adjust the paper stops for the paper size you will use.

If you purchased an output expander or 5-bin mailbox, you received a sheet of labels. These labels are provided so that you may label your various output bins.

The illustration indicates some places where you may attach the labels: output bin tray, paper stop, side cover, or wherever best suits your application.


Installing a High-Capacity Output Stacker

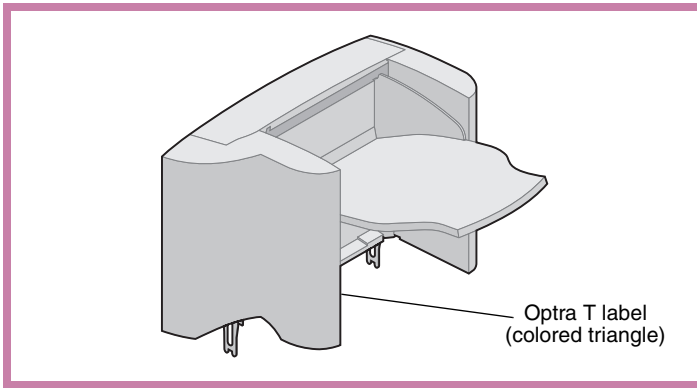

Optra T printer models T616(n), T614(n) and T612(n) support one high-capacity output stacker.


The high-capacity output stacker is packaged with installation instructions.

Installing the Envelope Feeder

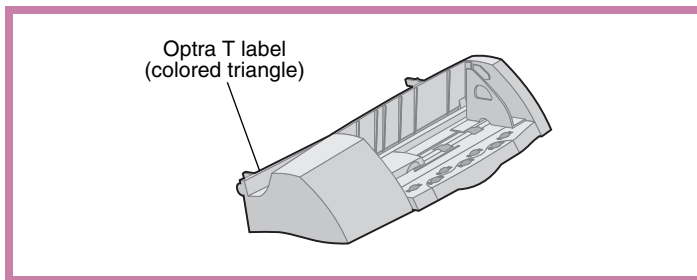


The envelope feeder attaches to the front of your printer behind the lower front door. It can be removed when you are not using it, making the printer more compact.

Refer to the *User's Guide*, available on the *Optra T Publications CD*, for information on using the envelope feeder.

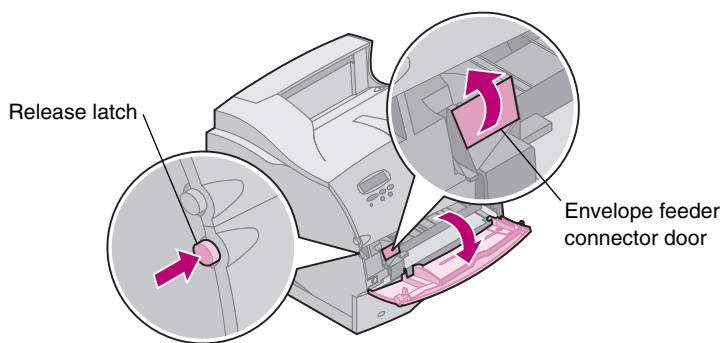

- 1 Push the release latch and open the lower front door of the printer.
- 2 Lift open the envelope feeder connector door.

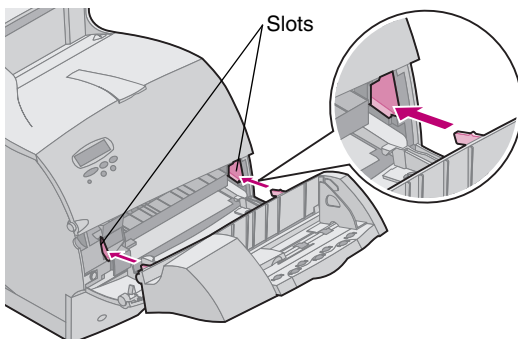

- 3 Align the tabs on the envelope feeder with the slots on both sides of the printer and gently push the envelope feeder into the opening until it snaps into place.




The envelope feeder tilts downward at a slight angle when it is installed properly.


Step 2: Install Memory and Optional Cards

Accessing the Printer System Board

You must access the printer system board to install printer memory, flash memory, or an optional card.


- 1** Make sure the printer power is off, the printer power cord is unplugged, and all cables are disconnected from the back of the printer.
- 2** Press the release latches to open the upper and lower front doors.
- 3** Press down on the side door latches and open the side door.
- 4** Loosen, but do not remove, the six screws as shown.

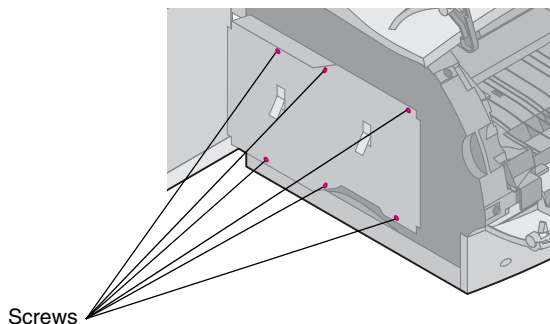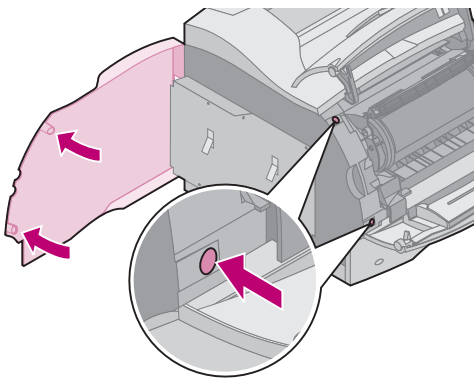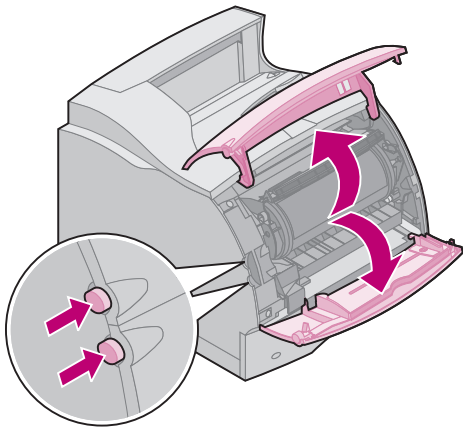

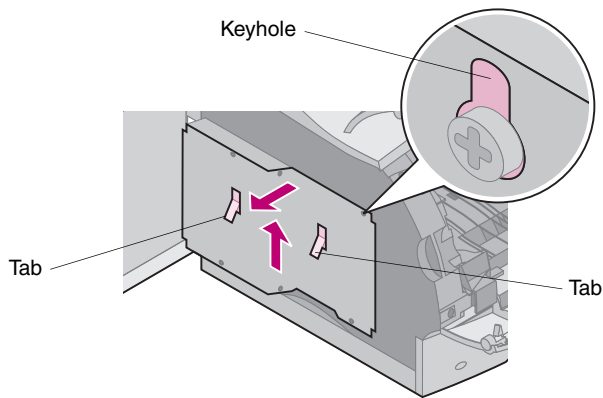


- 5 Use the tabs to slide the shield up until the top three screws fit into the three keyholes on the shield.
- 6 Hold the shield by the tabs and lift it off.

Installing Printer Memory or Flash Memory

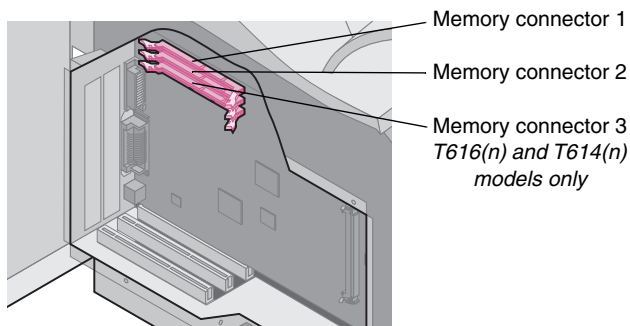

- 1 Follow the steps under “Accessing the Printer System Board” beginning on page 15.

Warning! Electronic components can be damaged by static electricity. Touch something metal on the printer before you touch the memory option.

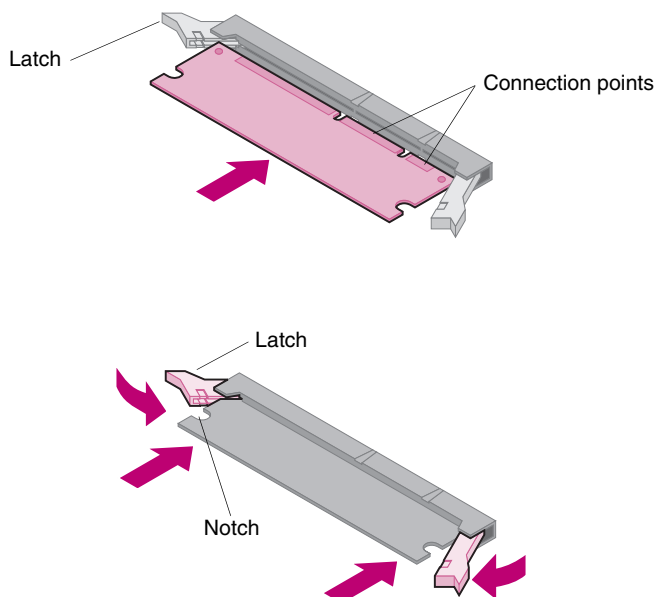

- 2 Unpack the memory option. Avoid touching the connection points along its edge. Save the packaging materials.
- 3 Open both latches completely. Insert the memory option straight into the connector with the connection points pointing toward the system board as shown.
- 4 Push the memory card firmly into the connector until it snaps into place. Make sure each latch fits over the notch located on either side of the option card.
- 5 See “Reattach Shield and Close Doors” beginning on page 18 to reattach the shield and side door.